



1. Remove 2 screws with a Phillips head screwdriver.



2. Seperate the base from the container.



3. Remove the pump / valve assembly by turning clockwise.



4. Replace with the new pump / valve assembly by turning it counter clockwise until it stops.



5. Reassemble by inserting the container assembly back onto the base.



6. Secure with the 2 screws.